61.129.211.003-BC20车灯说明书-A0
展开尺寸：380*160mm
4折页 双面单黑印刷 105g铜版

Illuminate Your Adventure

USER MANUAL

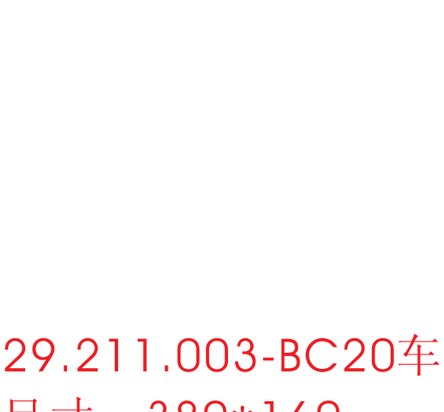

BC20
DUAL DISTANCE BEAM

Instant Turbo with the Remote Pressure Switch

MAX *400* LUMENS

Features

- Utilizes Cree XP-G2 R5 cool white LED, max 400 lumens output
- Warning LED lights
- Instant Turbo activation with the remote pressure switch
- DUAL DISTANCE BEAM SYSTEM
- 3 brightness levels, plus daylight mode and flashing mode
- Digitally regulated output - maintains constant brightness
- Quick attach and detach handlebar mount sized for 22mm-35mm handlebars
- Easy, secure adjustment of the light's direction
- Made of aluminum alloy and quality plastic

Components Included

BC20 Headlight
Handlebar Mount for the BC20
Remote Pressure Switch
Handlebar Mount Shim (one thick and one thin)
One O-ring

Technical Parameters

	General Mode			Warning Mode	
	High	Mid	Low	Daylight Mode	Flashing Mode
Output	400 lumens	180 lumens	80 lumens	/	180 lumens
Runtime	2h 20min	5h 30min	16h	/	/
Max Distance	120m				
Water Resistant	IPX-6				
Weight	Headlight:125g (excluding batteries)				
Max Input Voltage	12.8V				
Dimensions	Headlight: 104.5mm (Length) ×62.6mm (Width) ×34.5mm (Height)				

Notice: The above-mentioned parameters (lab tested by Fenix using four 2500mAh Ni-MH batteries) are approximate and may vary between the bike lights, batteries and environments.

Battery Specifications

Type	Dimensions	Nominal Voltage	Usability	
Ni-MH Battery	AA	1.2V	Recommended	√
Alkaline Battery	AA	1.5V	Usable	√
Non-rechargeable Battery (Lithium)	AA	1.5V	Usable	√
Rechargeable Battery (Li-ion)	14500	3.7V	Banned	×

Note: please do not use other types of batteries, misuse may lead to personal injury or cause damage to the bike light.

Operation

- Turn the BC20 on and off by simply pressing and holding the power button for two seconds.
- With the bike light on, cycle through the brightness levels and modes in the order of Low→ Medium→ High→ Flashing Mode→ Daylight Mode by a single press on the headlight power button.
- Instant Turbo activation: to activate the highest brightness level with the remaining battery power, press and hold the remote switch even if the bike light is off, releasing the switch returns the BC20 to the previous state. If the current level is the brightest when the light is on, the remote switch activates the next level down until released.

Note:

- As with any performance light, the BC20 builds up heat when run in High for an extended period. Intelligent circuitry in the BC20 downshifts the light to Mid to guard against overheating.
- The BC20 retains the last brightness level used even after batteries are changed.

Mounting Instructions

Battery Replacement

- Remove the battery case from the light's body by pushing the side buttons on the battery case and then pulling them outward.
- Insert the batteries observing the correct polarity direction of + and –.
- Insert the headlight into the battery case, the headlight and the battery case will be connected when a noticeable "click" is heard.

BC20 Mounting inc. Remote Switch

- Loosen the fine adjustment screw of the handlebar mount before clamping the mount to the bar by securely tightening the set screw.
- Open the rubber seal under the bike light and plug the cable of the remote pressure switch into it.
- Slide the headlight into the mount until an audible "click" is heard.
- Attach the Remote Switch to your bars where it is easy to operate, using the Velcro strap provided.

Note:

- Adjust the direction of the headlight before testing the BC20's power and functions.
- Use shims provided to size the handlebar mount to the bike's bar.

Safety Tips

Important Notice

- BC20 is a high-intensity lighting device and capable of causing eye damage so avoid shining the light directly into the eyes.
- Avoid touching the metal parts of the BC20 as LED lights accumulate heat when powered up.
- Water resistant to IPX-6, BC20 can be used in humid conditions but is not rated for water immersion.
- Please keep it out of the reach of children.
- When not in use, take out the batteries to avoid battery leakage or damage to the bike light.
- Please don't disassemble the sealed parts, as doing so can cause damage to the BC20 and will void the warranty.
- Long-term use can result in O-ring wear. To maintain a proper water seal, replace the ring with an approved spare.

Night Riding Tips

- Never ride alone.
- Always let someone know where you are.
- Wear a helmet and reflective clothing.
- Carry an auxiliary light and emergency supplies.
- Make sure the headlight, handlebar mount and battery case are securely fastened.

Product Warranty

We will replace products afflicted with manufacturing defects within 15 days of purchase and repair a light free of charge within 24 months of purchase if problems develop with normal use; if repair is required after 24 months from the date of purchase, we will charge for parts. The total repair fee is dictated by the cost of the replaced materials.

Product Registration

We kindly suggest that you register your product on the official website of Fenixlight Limited (www.fenixlight.com). You'll receive an extra six months of warranty coverage once you have successfully registered. By participating in an optional customer survey, you are entered in a drawing for free Fenix products.

FENIXLIGHT LIMITED
Tel: +86-755-29631163/83/93 Fax：+86-755-29631181
E-mail：Info@fenixlight.com www.fenixlight.com
Address: 8/F, 2nd Building, DongFangMing Industrial Center, 33rd District, Bao'an,Shenzhen 518133, China

点亮激情户外

说　明　书

BC20
双光斑系统，线控一键极亮功能

最高亮度*400*流明

产品特点

- 使用Cree XP-G2 R5冷白光LED，最高亮度400流明
- 行车警示灯
- 线控一键极亮功能
- 双光斑照明系统
- 三个亮度档位及日间行车警示模式
- 恒流电路，亮度恒定
- 快拆车夹，兼容尺寸范围为22~35毫米的车把
- 可调节灯头角度
- 采用铝合金及优质塑料制造

产品组件

产品参数

	照明模式			警示模式	
	高亮	中亮	低亮	日间行车	闪烁警示
亮度	400流明	180流明	80流明	/	180流明
续航时间	2小时20分	5小时30分	16小时	/	/
最大射程	120米				
防水等级	IPX-6				
净重	灯头：125克（不含电池）				
最大输入电压	12.8V				
尺寸	灯头：104.5毫米（长）×62.6毫米（宽）×34.5毫米（高）				

注：上述参数只是一个近似值，以4节实测容量2500mAh的镍氢电池在实验室环境中测试所得，可能会随着车灯、电池和使用环境而发生变化。

可选用电池类型

电池类型	规格	标称电压	是否可用	
镍氢电池	AA	1.2V	推荐	√
碱性电池	AA	1.5V	可用	√
一次性锂电池	AA	1.5V	可用	√
可充锂电池	14500	3.7V	不可用	×

注：不建议使用其它类型的电池,错误的使用电池会对您的人生安全造成影响与损坏车灯。

操作方式

- 长按灯头按钮打开/关闭车灯。
- 开机状态下，单击灯头按钮，即可按低亮→中亮→高亮→闪烁警示→日间行车循环的顺序调节车灯亮度。
- 关机状态下，按下线控按钮，可以点亮车灯到最亮档，放开即关闭。在开机状态下，如前档位为最亮档以下的档位，按下则进入最亮档，松开回到当前档位；如当前档位为最亮档，按下则进入最亮的下一个档位，松开回到当前档位。

注：

- 由于本产品以高亮档长时间工作时，会积累大量热量，当温度较高时车灯可能会启动过热保护功能，自动降低亮度档位。
- 车灯会自动记忆照明模式的亮度档位，但不会记忆模式，每次打开时都会以照明模式开始工作。

安装方式

如何装电池

- 一只手捏住灯头部分，另一只手按住电池盒两侧按钮，向两侧平行拉开。
- 按电池盒正负极指示装入电池。
- 一只手捏住灯头，一只手拿电池盒部分，对准方向后插入，听到“咔”声表示组装完成。

组装车灯与线控

- 旋开车夹螺杆，在车把上选择合适的位置，装上车夹，旋紧螺杆即可。
- 打开车灯下的橡胶塞，插入线控开关。
- 一只手拿车灯，将车灯尾部滑槽对准车夹滑槽插入，听到“咔”声后表示组装完成。
- 在车把上选择合适的位置，将线控绑带绕过车把固定即可。

注：

- 可以根据使用情况调整车灯的角度。
- 可根据自行车把的大小选择合适的胶垫（厚+厚适合22-25mm车把，厚+薄适合25-32mm车把，薄+薄适合32-35mm车把）。

安全提示

使用车灯须知

- 本产品亮度极高，请勿直视发光体，以免造成视力损伤。
- 本产品在工作状态下会产生一定热量，请避免直接接触其金属部分。
- 本产品防水等级为IPX-6，能在暴雨、浓雾等环境中正常使用，但请勿将本品直接浸入水中。
- 请将本产品置于儿童接触不到的地方。
- 如长时间不使用车灯，请将电池取出，以免电池漏液，对车灯造成损坏。
- 请勿拆卸车灯密封部件，否则将会导致保修失效并可能损坏车灯。
- 长期使用车灯后，防水圈可能受到损坏，请及时更换防水圈，以维持车灯的防水性。

夜间骑车安全提示

- 不要单独夜间骑车。
- 随时让人知道你在哪。
- 配戴头盔，着反光衣。
- 携带一个备用灯与紧急备用物资。
- 确保灯头、车夹及电池盒已装稳。

保修条款

- 15天包换期：Fenix产品自售出之日起15天内，在正常使用情况下，出现产品质量问题，客户可选择更换新品或修理服务,要求更换时，所换产品应为返修产品同型号同规格的新品；如同型号同规格的产品停止生产时，则调换不低于原产品性能的同品牌产品。
- 2年免费保修期：Fenix产品自售出之日起2年内，用户在正常使用情况下，出现产品质量问题，则享受免费维修服务。电池包享受1年免费维修服务。
- 终身有限保修：自行车灯在超过2年免费保修时间外，电池包在超过1年免费保修时间外，Fenixlight Limited公司将提供有偿保修，费用以实际更换材料费用为准，不另收取人工费用。
- 消费者保修时凭Fenixlight Limited《质量保证卡》、购物发票与经销商联系，由经销商对消费者提供服务，我公司将对经销商提供服务支持。
- 建议消费者到Fenixlight官网（www.fenixlight.com）进行产品注册，注册成功后即可再得到6个月的免费保修期，即共有2年半的免费保修期。

深圳市朗恒电子有限公司
电话：+86-755-29631163/83/93 传真：+86-755-29631181
邮箱：info@fenixlight.com 网址：www.fenixlight.com
地址：中国深圳市宝安33区东方明工业城2栋8楼
邮编：518133